



WASHING MACHINE


Open the door and put the laundry in the drum, close the door



Select the desired wash programme (you can scroll forward and backward through the menu)



Open the door by clicking on the key

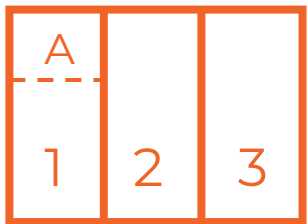

Add the detergent:

- 1 Detergent for main wash
- 2 Fabric softener
- 3 Detergent pre-wash

A Put this flap down if you use liquid detergent

Make the payment and press the START key