





Washing machine

Open the door and put the laundry in the drum, close the door.

Select the wash programme (programmes with a lower line balance)

Make the payment and press the START button

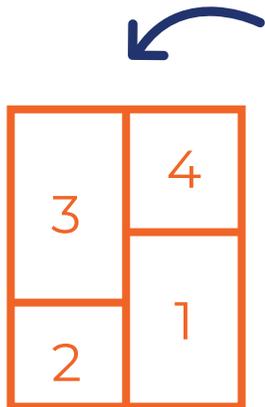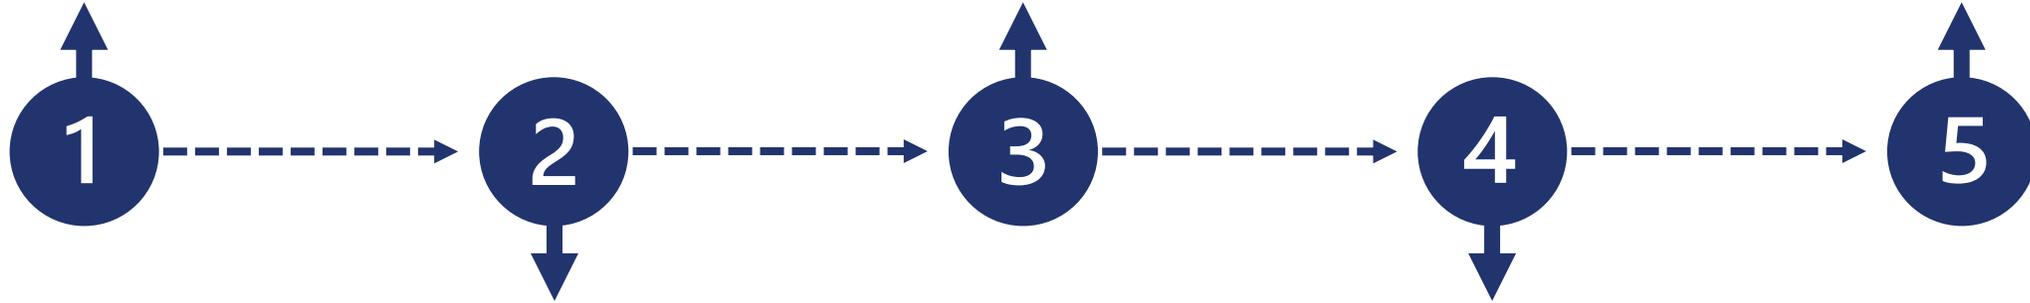

Add detergent:
1 Main wash detergent
2 Bleach
3 Softener
4 Pre-wash detergent

Set the wash programme according to the degree of soiling:

- A: Main wash only
- B: Prewash and main wash
- C: Prewash, main wash and additional rinsing