

DRYER

Open the door and put the Clean the lint Select the desired laundry in the drum, close drying programme filter after every (you can scroll forward and drying cycle! the door backward through the menu) Fill the drum for Make the payment and press the START key HALF