




WASHING MACHINE

Open the door and put the laundry in the drum, close the door

Select the desired wash programme by turning the selection knob in either direction.

Close the washing machine door and press the Start / Pause button.

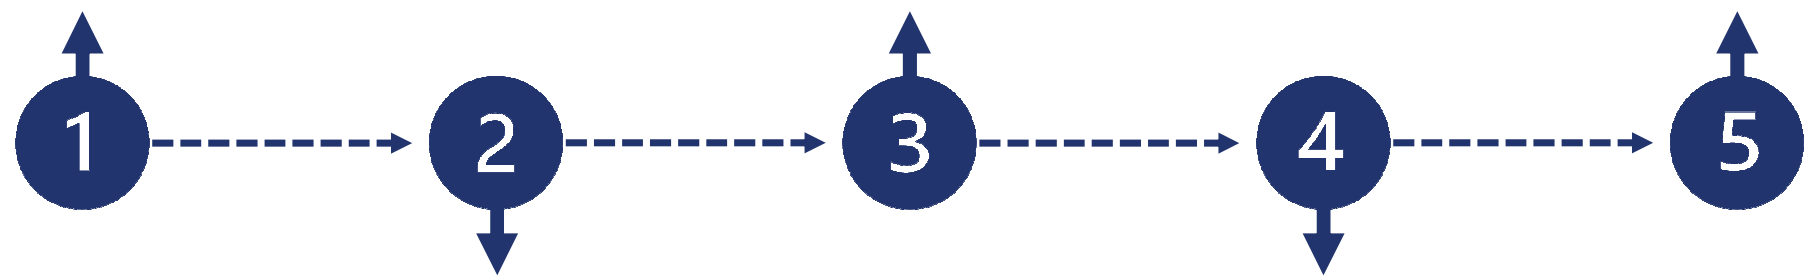

Add the detergent:

- 1 Prewash
- 2 Liquid main detergent
- 2 Powder detergent
- 3 Folding barrier
- 4 Fabric softener/conditioner
- 5 Box for removing detergent compartment

Confirm the programme by pressing the button below the programme.

